



# Lenovo YOU Z2 Pro teardown

Partially decomposed Z2 Pro

Written By: Mike



Z2 Pro  
就要痛快

高通骁龙820处理器  
6GB内存+128GB存储  
血氧心率紫外线即时感测  
10大专业传感器

# INTRODUCTION

Sketch what you're going to teach someone, and how.


---



## TOOLS:

- [Philips Head Screwdriver: Sized PH000](#) (1)
  - [Paper Clip](#) (1)
  - [Spudger](#) (1)
  - [iFixit Opening Pick](#) (1)
  - [Razor Blade](#) (1)
  - [Heat Gun](#) (1)
  - [Little sucker](#) (1)
-

## Step 1 — Remove Back Cover

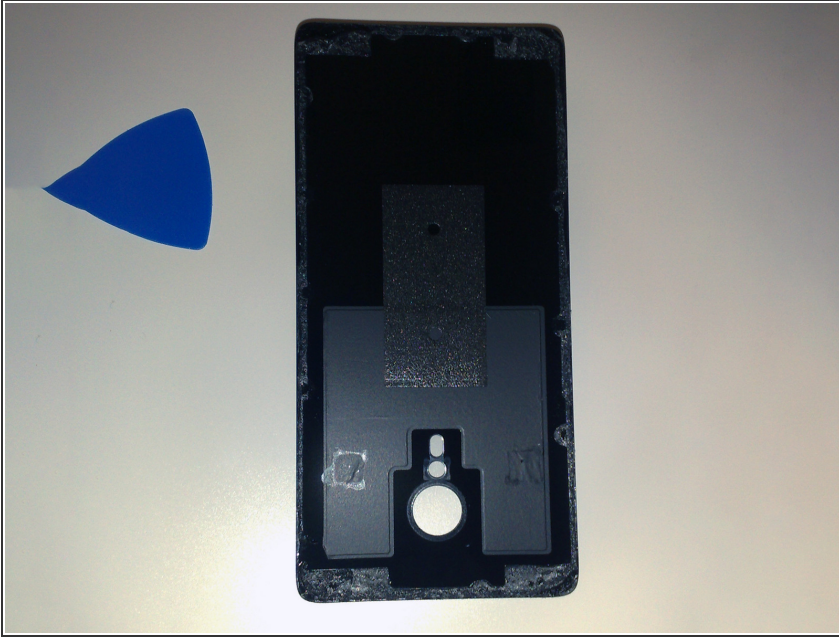


- Here insert instructions.

## Step 2 — Solve the screws "rollcage"



- ⚠ 17 screws
- 12 Black (Greater)
- 5 Silver (shorter)
- ⓘ The Roll Cage is clicked on the sides, be careful!

## Step 3 — Remove motherboard

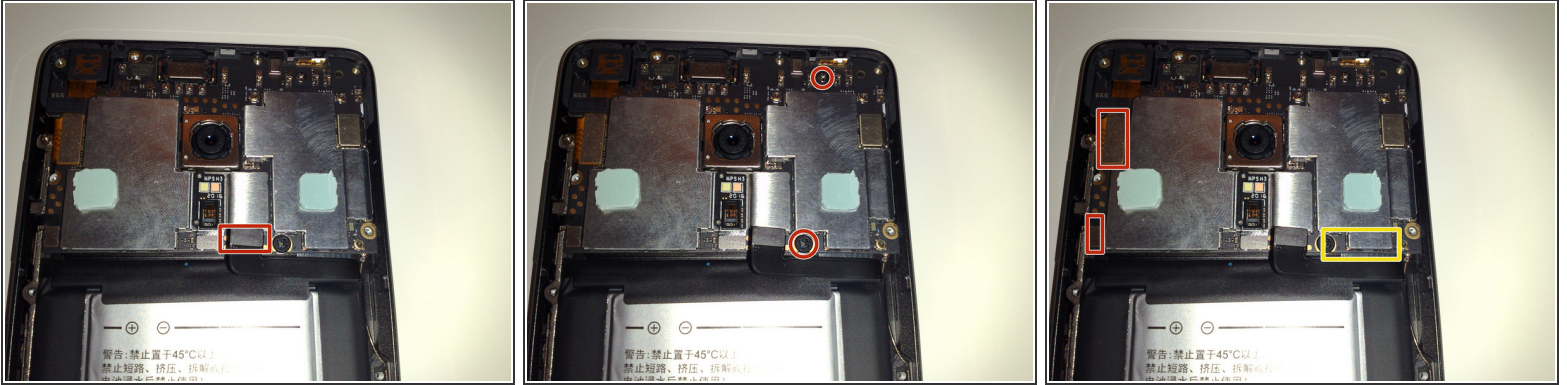


### ⚠ 1. Battery disconnect!

- .2.: Promptly remove the flex cable for display and control buttons
- .3.: Remove Schrauben the motherboard.


⚠ Attention, there is a flex cable directly to the motherboard next to the thick black screw. This is used to transfer between the motherboard and speaker, USB, Home button.

## Step 4 — The motherboard (front)

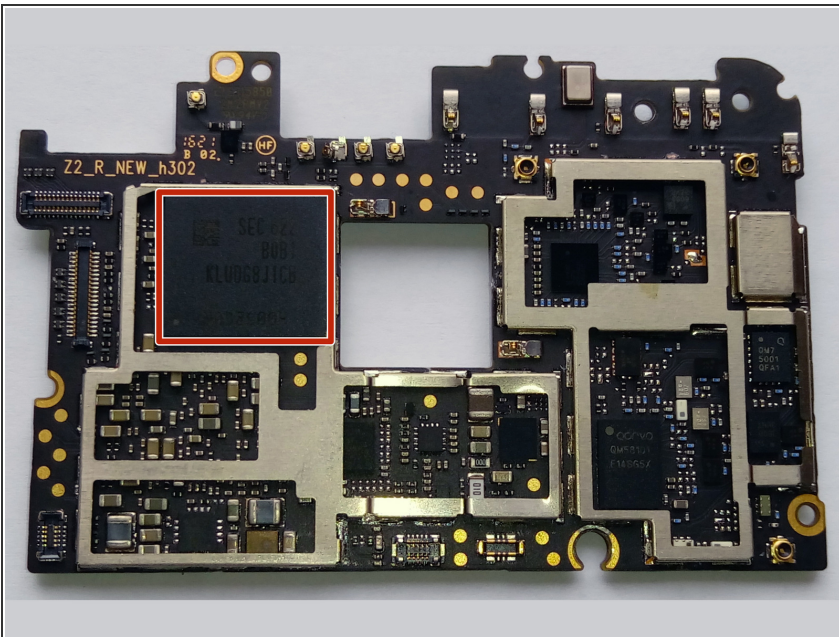

- Samsung [KLUDG8J1CB-B0B1](#) 128 GB UFS 2.0 with Qualcomm Snapdragon 820 SoC (MSM8996)

## Step 5 — The mainboard (back)

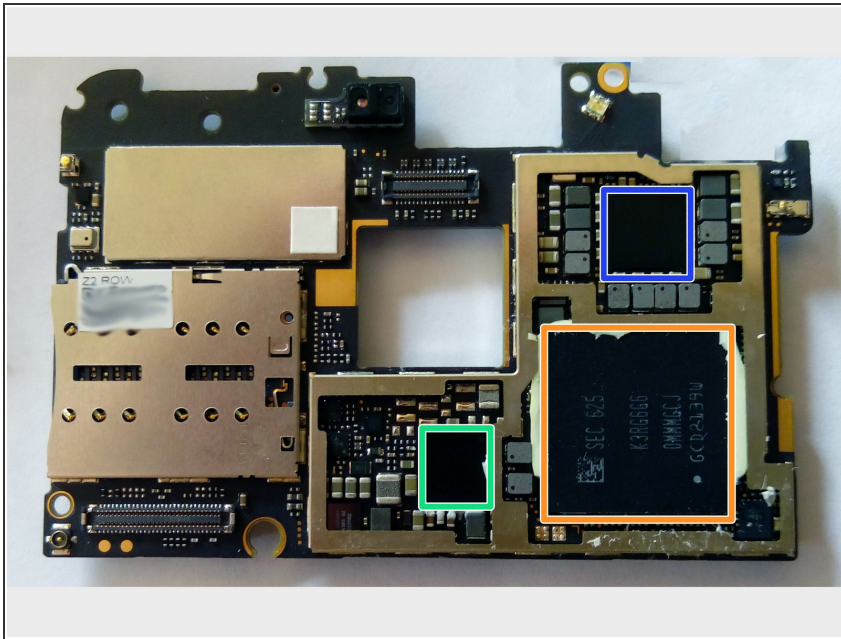

- Samsung [K3RG6G60MM-MGCJ](#) DDR4 6GB RAM
- Qualcomm PM8996 Power Management IC
- Qualcomm PM8996 Power Management IC

This document was last generated on 2017-07-20 06:41:07 PM.